

User guide

The use of tags on SensoLock® Locker lock on mailboxes



Your new locking system means that you now have an electronic SensoLock® Locker lock on your mailbox. To open and close the mailbox, you must now use the programmed access tags or cards instead of traditional, mechanical keys. Below is a short instruction in the use of tags on a SensoLock® Locker lock.

Use of tags/cards on SensoLock® Locker lock

1. Activate the Locker lock by pressing the LED button to make it light up.
2. Hold the tag in front of the reader symbol for 1-2 seconds. If the tag has the correct access rights, the LED button will light green.
3. Turn the Locker lock lever 90° clockwise to open the Locker lock. The mailbox can now be opened.

The Locker lock will lock again right away by turning the lever back to original position, or the position locks automatically after 5 seconds.

4. To lock the Locker lock again, hold the tag in front of the reader symbol and turn the lever 90° anti-clockwise back to original position.



Press LED button



Scan tag on reader



Locker lock open




Locker lock closed

Note

The mailbox will only unlock if you have authorized access to the door.

It is recommended to validate the tag/card once a day by holding it in front of an online reader (most often placed by the front door or integrated in the door station).

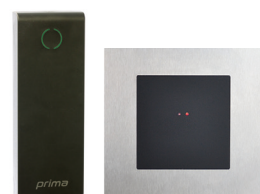

Battery status

SensoLock® Locker lock has an integrated battery control system that will show the capacity of the battery in three stages and thus when it is time to change the battery. Please contact your installer / property manager if the battery needs to be replaced.

Low battery can be discovered in these three stages:

1. 5 red flashes and a sound signal, when a tag or card is presented to the Locker lock.
2. 5 red flashes and a sound signal, when a tag or card is presented to the Locker lock. Because of the low battery it will take 5 seconds before the handle will show green flashes and unlock the door.
3. 5 red flashes and a sound signal, but the Locker lock will not unlock. The Locker lock will not be able to read any authorized tags/cards.

Cleaning of SensoLock® Locker lock

It is recommended that the Locker lock is cleaned with the use of a soft wrung cloth. Do not use steam equipment when cleaning the Locker lock.

Cleaning detergent

- Only use pH-neutral detergents and water.
- Do not add the detergent directly to the Locker lock, but instead on the soft wrung cloth.
- Do not use detergents that contain chlorine or acid, as this can damage the surface of the product.
- Only use detergents without abrasive.
- Only use disinfectant on metal surfaces and only in accordance with the guidance.