

Guide

Use of chips for the EvoLock®



With your new lock system you now have electronic EvoLock handles on the door. To open the door, you will now have to use your chips. Below you will find a short instruction for the use of chips on the Ecolock.

Use of chips for the EvoLock®

Hold the chip in front of the chip reader for 1-2 seconds.

If the chip has the correct access, 4 small LED lamps will light green, and a small vibration sound will be heard. Afterwards the door can be opened by pushing down the handle. The door locks automatically when it closes.

From the inside, the door will always seem unlocked (like in hotels), if you want to check that the door is locked, you will have to open the door and push down the handle from the outside.



Note this

The door will only unlock if the chip has the correct access.

It is recommended, that the chips are validated once a day by holding it in front of the chip reader (often placed by the main entrances.)

Battery status

EvoLock® has a built-in battery system, which shows the battery's capacity, and when it is time for a battery change. Please contact your inspector or administration, if the low battery shows.

Low battery can be shown in 3 phases:

1. 5 red blink and sound signal will appear when a chip is placed in front of the reader.
2. 5 red blink and sound signal appears when a chip is placed in front of the reader. Due to low battery, it will take 5 seconds for the door to light green and open.
3. 5 red blink and sound signal appears, but the door does not open. The chip reader will not approve any access chip.



Toggle function

Toggle function does only work if the correct access is granted.

Activate Toggle = The doors automatic lock is permanently off

- Hold the chip in front of the EvoLock® for 4-5 seconds.
- First when the chip reader lights green – continue to hold the chip in front of the reader – after 4-5 seconds, the reader will light green again and a howling sound appears.
- Now remove your chip from the EvoLock®
- Toggle function is now active and the EvoLock® is now in always unlocked function.
- To lock the door again, the Toggle function will have to be deactivated, please see below.

Deactivate Toggle = The doors automatic lock is permanently on

- Hold the chip in front of the EvoLock® for 4-5 seconds.
- First when the chip reader lights green – continue to hold the chip in front of the reader – after 4-5 seconds, the reader will light green again and a howling sound appears.
- Remove your chip from the EvoLock®
- The Toggle function is now deactivated and the EvoLock® is back in its normal function – always locked.

Cleaning the EvoLock®

It is recommended that the handle of the EvoLock® is cleaned with a lightly moistened soft cloth. You should not use steam equipment for cleaning the EvoLock®.

Cleaning supplies

- Only use pH-neutral cleaning supplies and water
- Do not put the cleaning supplies directly on the handle, but on the soft moisturized cloth instead.
- Do not use cleaning supplies, which contains; chlorine or acid, it can damage the handles surface.
- Use only cleaning supplies without abrasive.
- Use only disinfection supplies on metal surfaces and use it according to the guide.